


## Wheel Center Puller

The Wheel Center Puller is a hydraulically-driven press designed to be used in conjunction with the Hydraulic Assist Pump. It can be used to alleviate press workloads for wheel assembly and center removal.

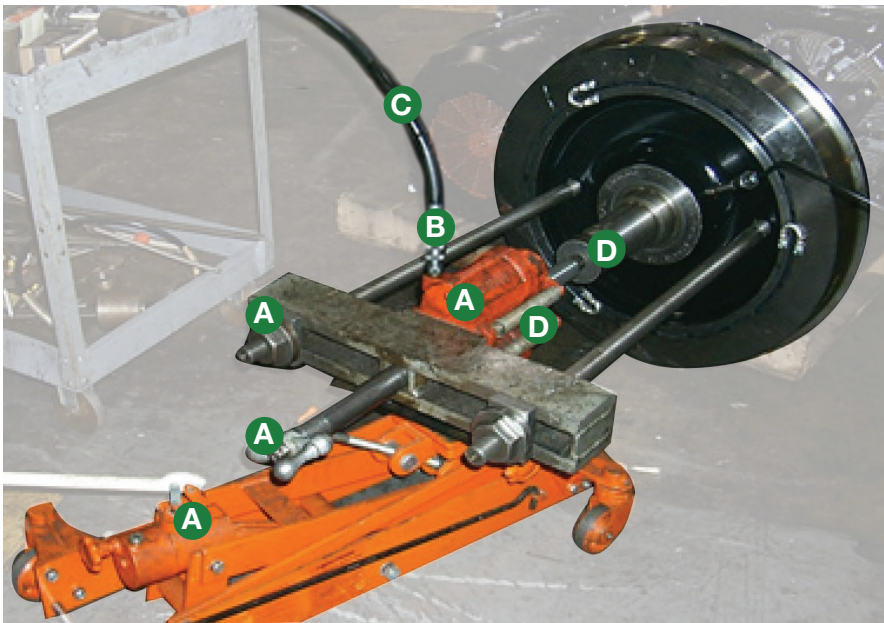

- A OTC Push Puller**  
(includes Puller Bar, Floor Jack, Jack Handle, Manual Crank Handle & Hydraulic Cylinder)
- B Hydraulic Disconnect**
- C Hydraulic Hose**
- D Legs**  
(includes Nuts & Backing Washers)

*Wheel Center Puller*

Wheel Center Puller component parts information:

- OTC Push-Puller (Part #00700331 – Includes Puller Bar, Floor Jack, Jack Handle, Manual Crank Handle & Hydraulic Cylinder)
- Legs (Part #00700335 – Includes Nuts & Backing Washers)
- Hydraulic Disconnect (Part #00655643)
- Hydraulic Hose (Part #00700333)
- Gauge (Part #00700336)
- Pulsation Dampener (Part #00700337)
- Hydraulic Pump (Part #00654876)

---

**Terms & Conditions:** Equipment available only to end users of PMC resilient wheel products.

---